Vintage Designs

Altec-Lansing's 606-Type Cabinet

Courtesy of Sanford Marzel

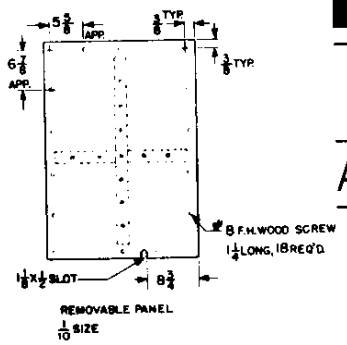

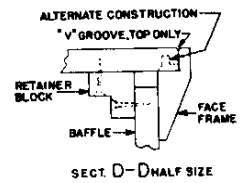

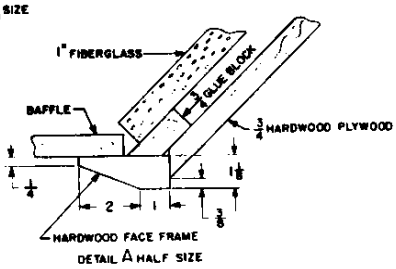

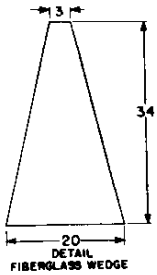

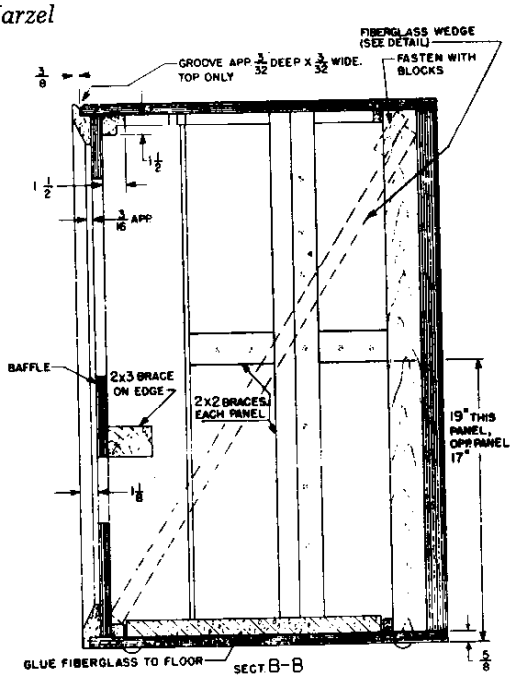

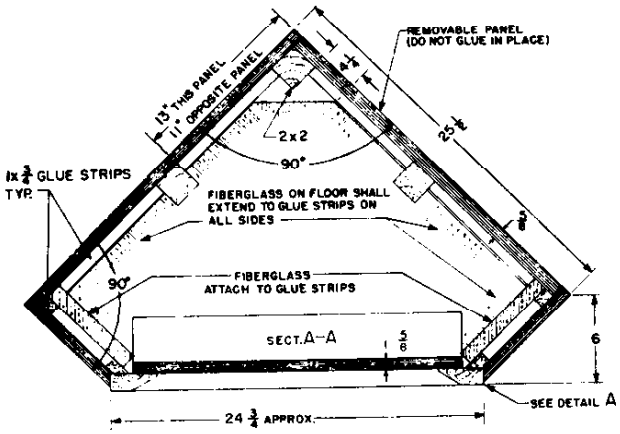

NOTES:

1-ALL JOINTS TO BE GLUED AND NAILED OR SCREWED EXCEPT AS SHOWN.

2-HARDWARE REQUIRED TO MOUNT LOUDSPEAKER.

15" SPEAKER- 1/4-20 X 1 1/4 MACHINE SCREWS (4 REQ'D.)

12" " " " " 3/4 " " " "

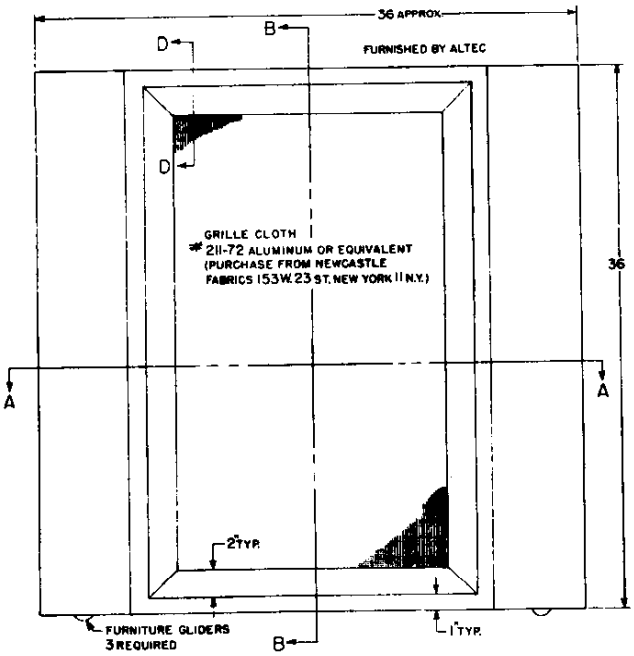

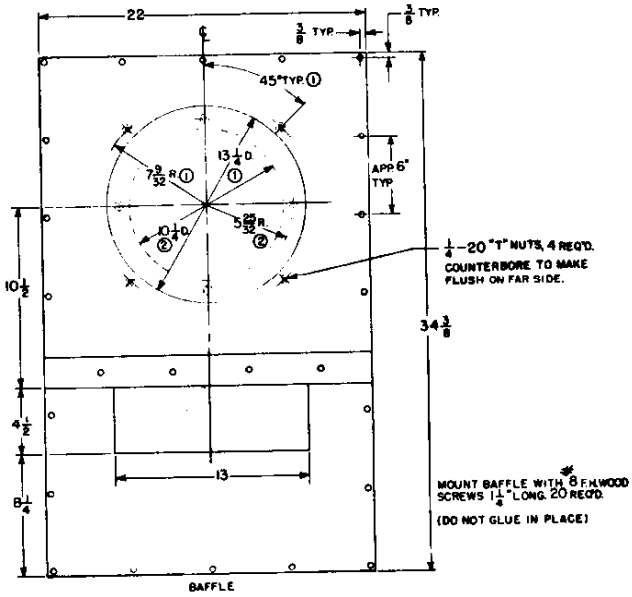

① 606A CABINET (FOR 15" SPEAKER)

② 606B CABINET (FOR 12" SPEAKER)

MATERIAL: 3/4 PLYWOOD (EXCEPT AS SHOWN).

RECOMMENDED GRILLE CLOTHS
BLONDE CABINETS - NEWCASTLE 211 LT. BLONDE
DARK CABINETS - " 211-72 ALUMINUM

FIBERGLASS: PF-617 (OC9) 1" THICK.

606 TYPE CABINET